 
 
 
 
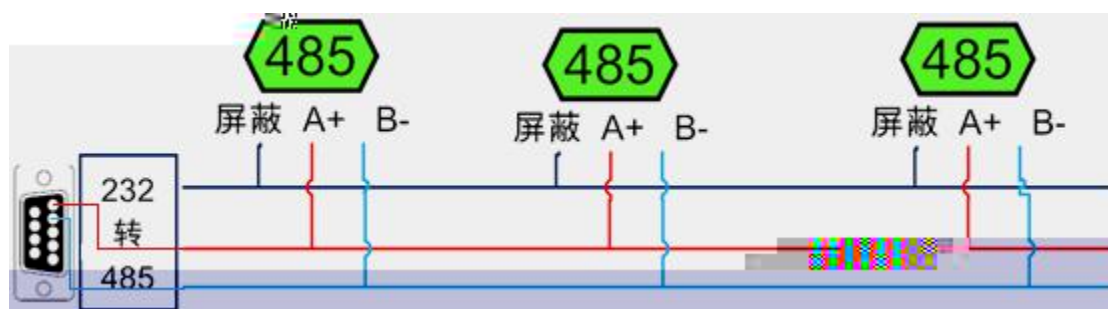 


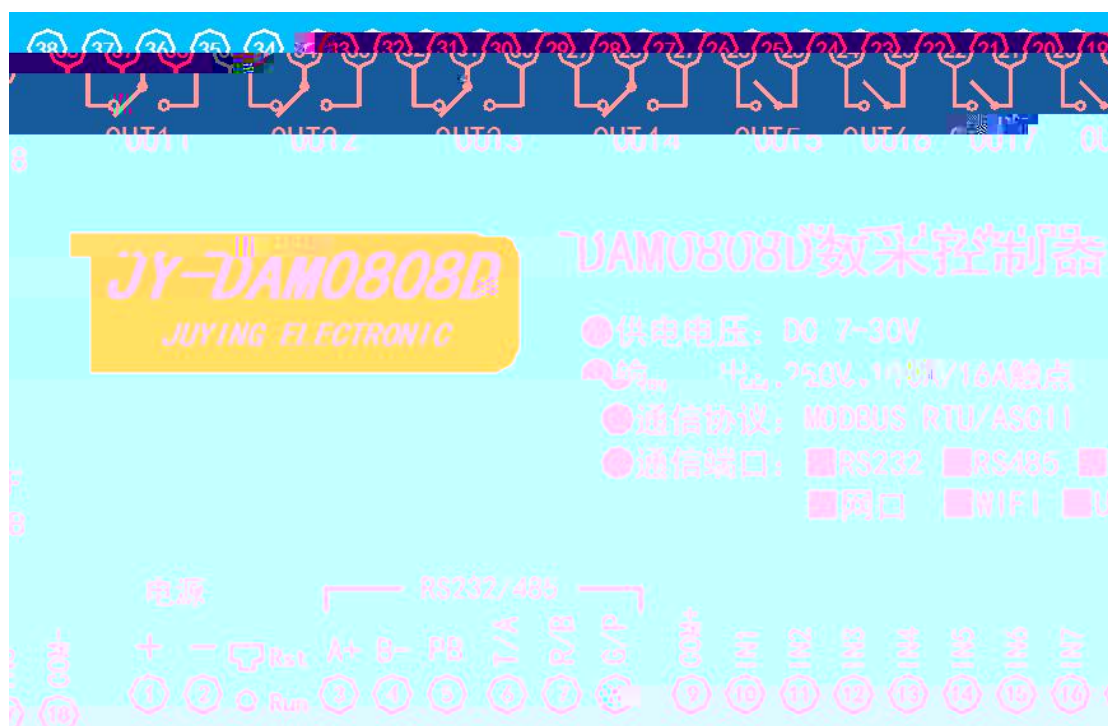

-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-

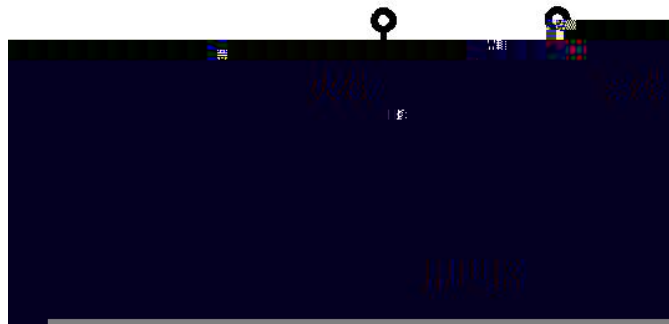 


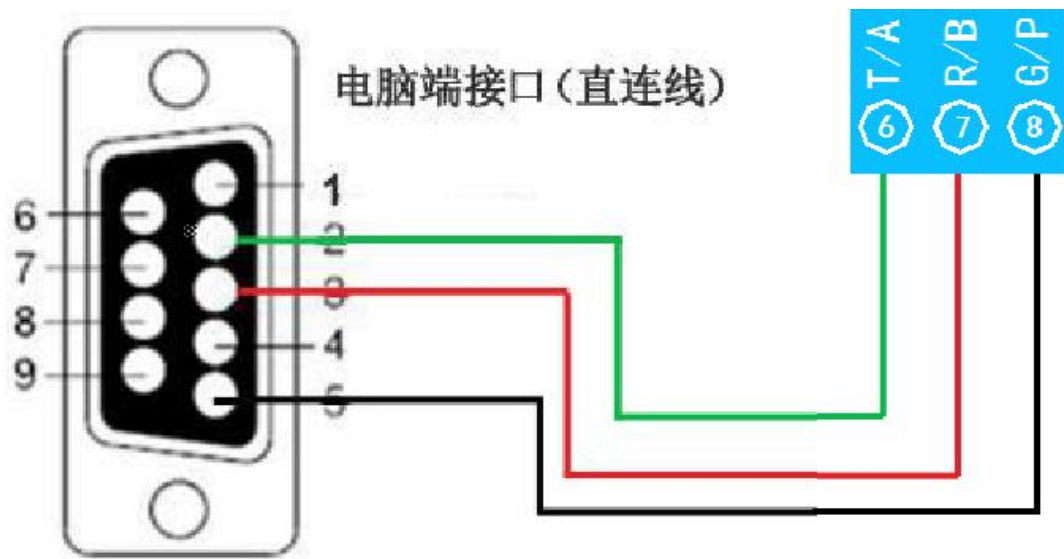

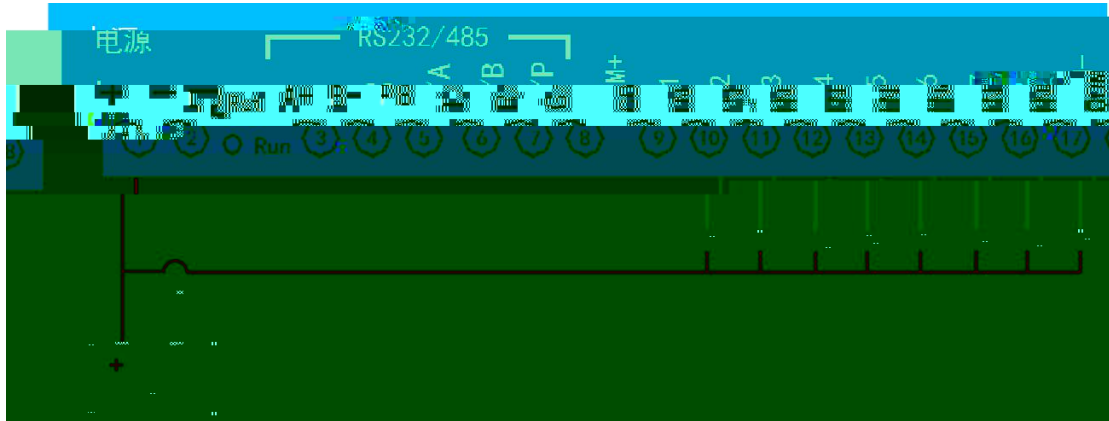

<http://www.juyingele.com.cn/software/software/> DAM

.rar

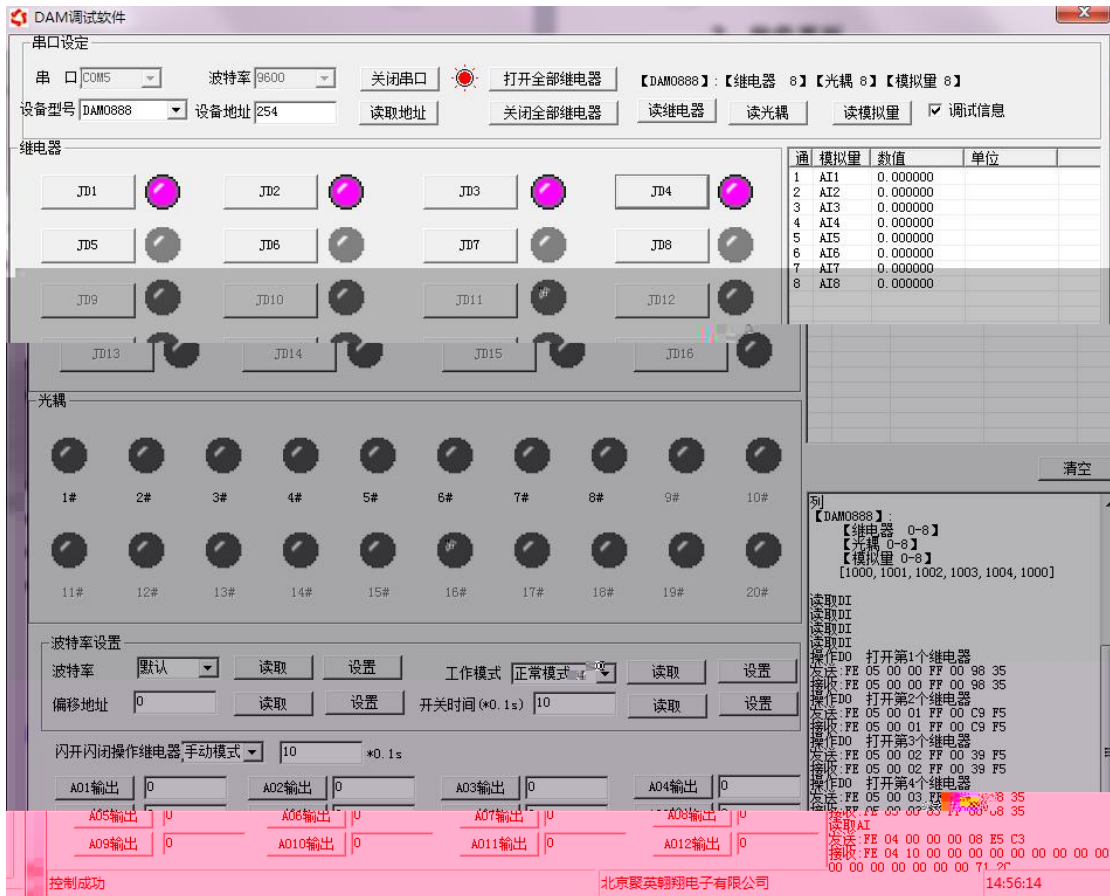



串口设置

串口: COM5 波特率: 9600 关闭串口 打开全部继电器 【DAM0888】: 【继电器 8】 【光耦 8】 【模拟量 8】


设备型号: DAM0888 设备地址: 0 读取地址 关闭全部继电器 读继电器 读光耦 读模拟量 调试信息


继电器

光耦

通道	模拟量	数值	单位
1	AI1	0.000000	
2	AI2	0.000000	
3	AI3	0.000000	
4	AI4	0.000000	
5	AI5	0.000000	
6	AI6	0.000000	
7	AI7	0.000000	
8	AI8	0.000000	

  读取AI
发送: FE 04 00 00 00 08 E5 C
接收: FE 04 10 00 00 00 00

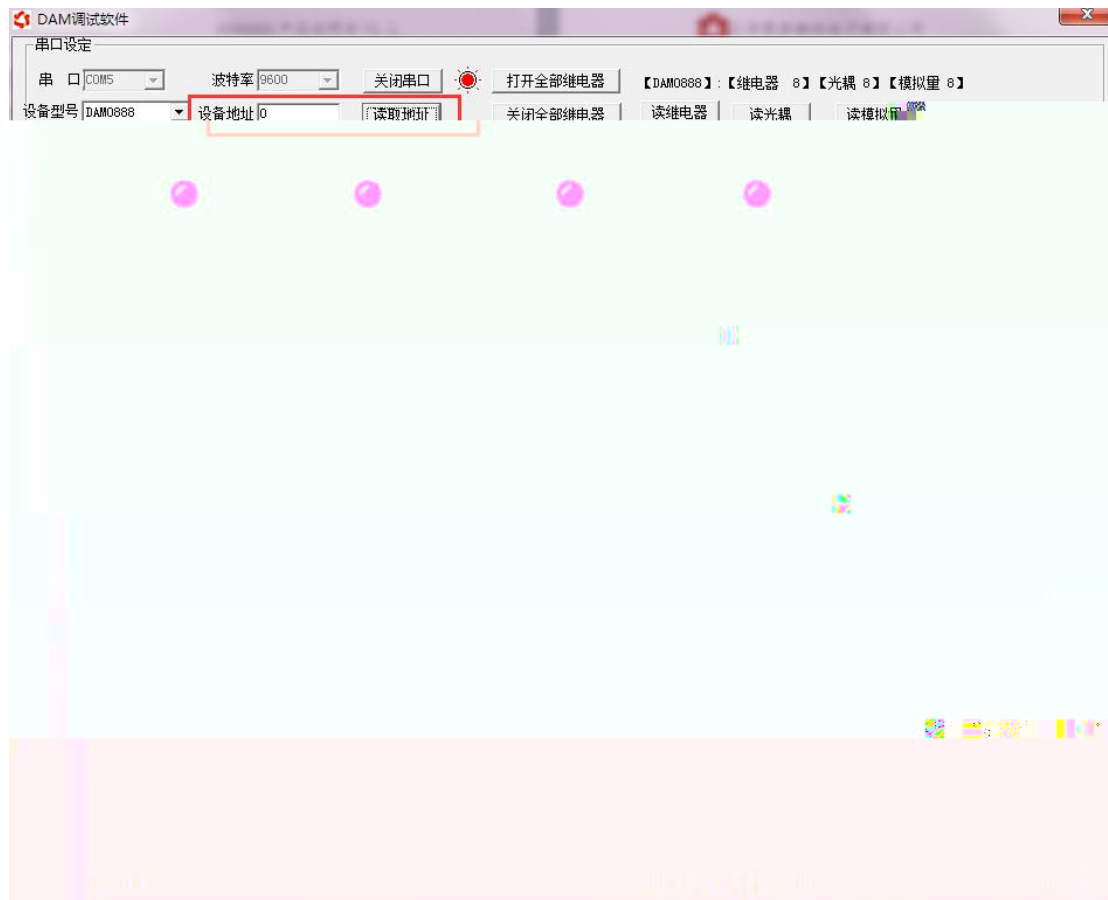

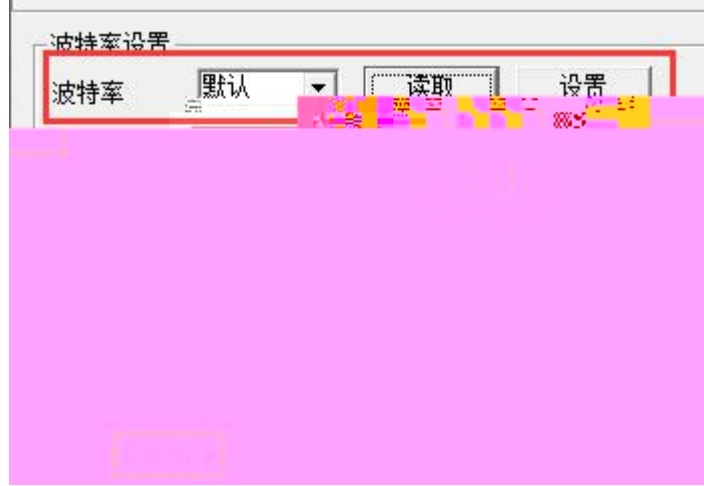


2.1.1

2.1.2

2.1.3

2.1.4

 2.1.5

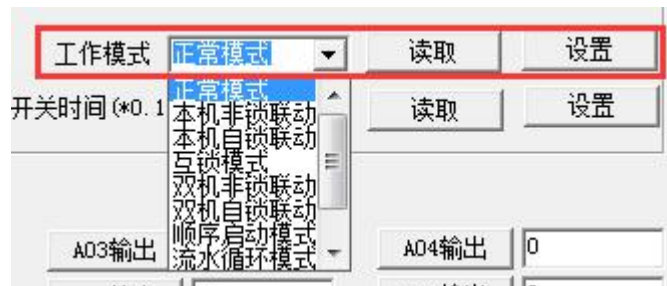

WORLD

JUYING E

FE 01 00 00 00 08 29 C3

FE 02 00 00 00 0C 6C 00

