



	1
	1
	1
	1
	1
	2
	2
	3
1	3
2	3
3	4
4	4
	
	ID	
1	
2	
	
	8
1	8
2	M db	8
1	11
2	12
	14


- DC7-40V
-
- WIFI+RJ45
- IP 192.168.16.254
- WIFI HI_Li k_** **
- 2400,4800,9600,19200,38400
- db RTU/TCP
-

-
-
-
-
- UDP/TCP
- Clie Se e
- M db c
-
-
-

I e e
60001

e j d .c

一、使用移动网络

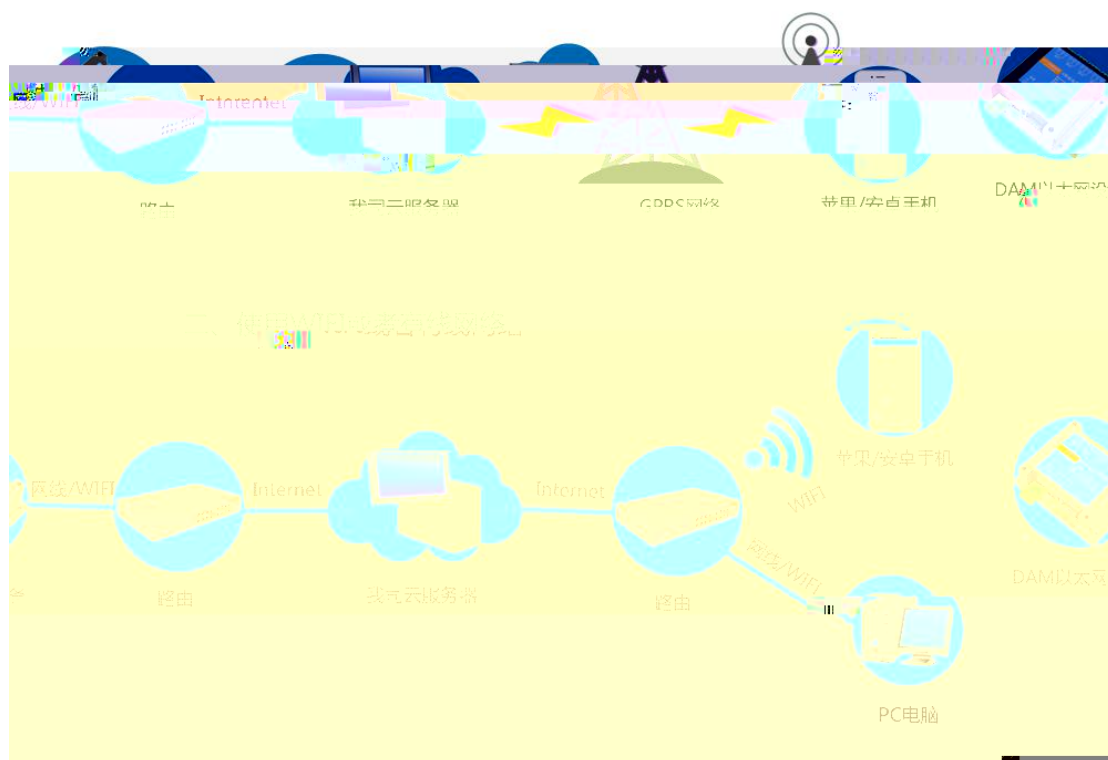


- 1
- 2
- 3 ID

4


a

5


1

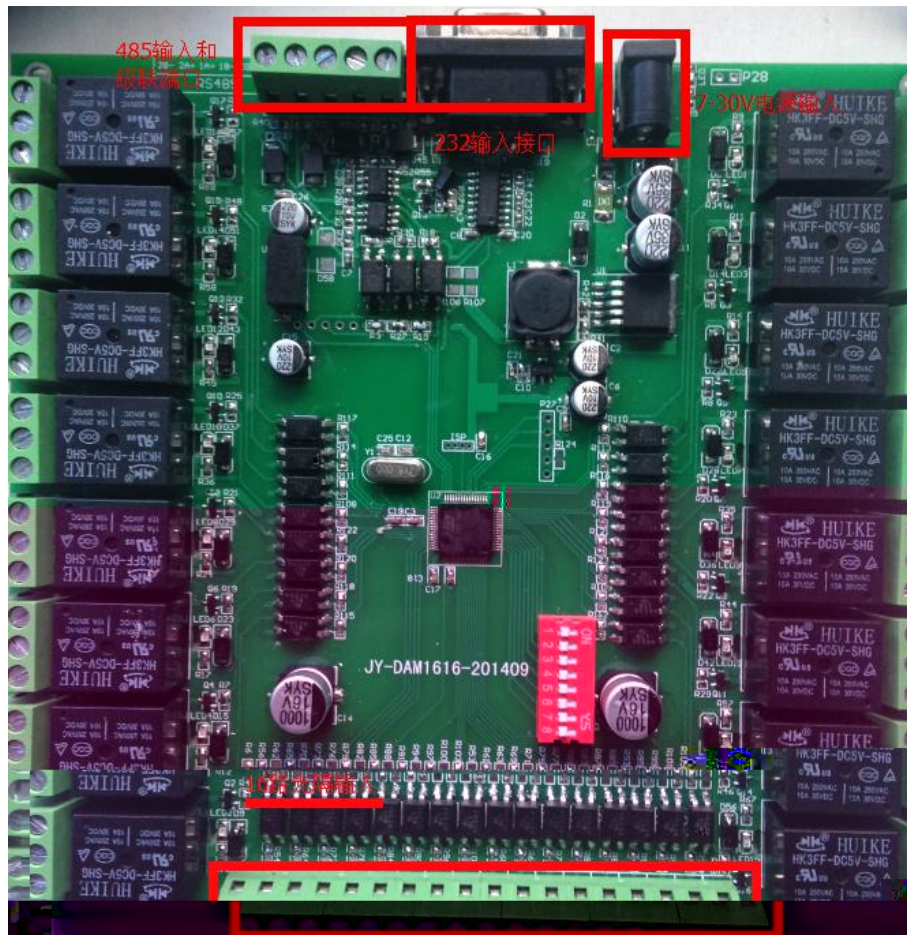


2

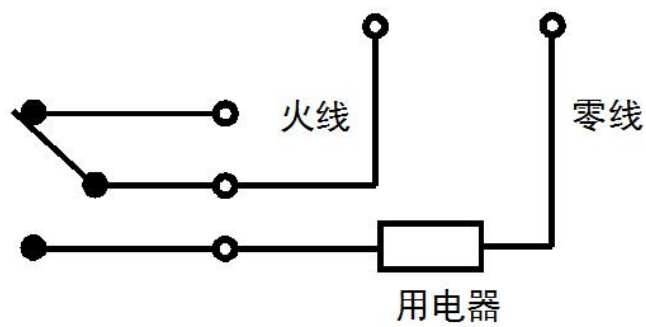

3

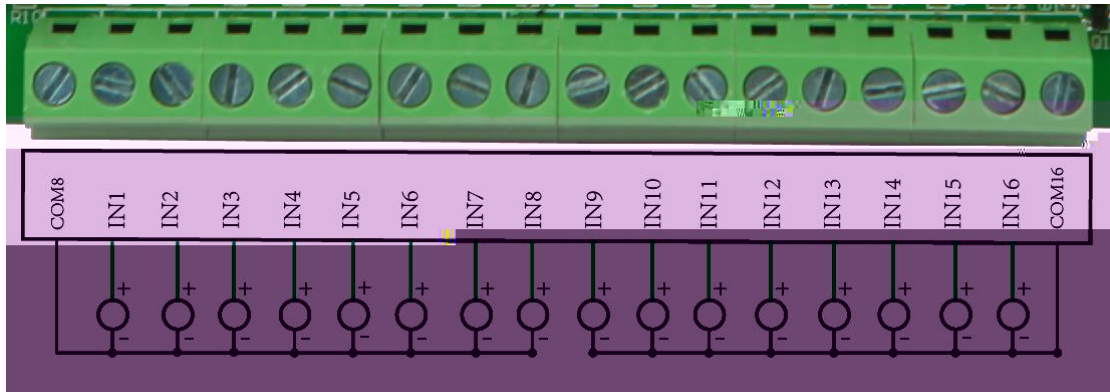

4

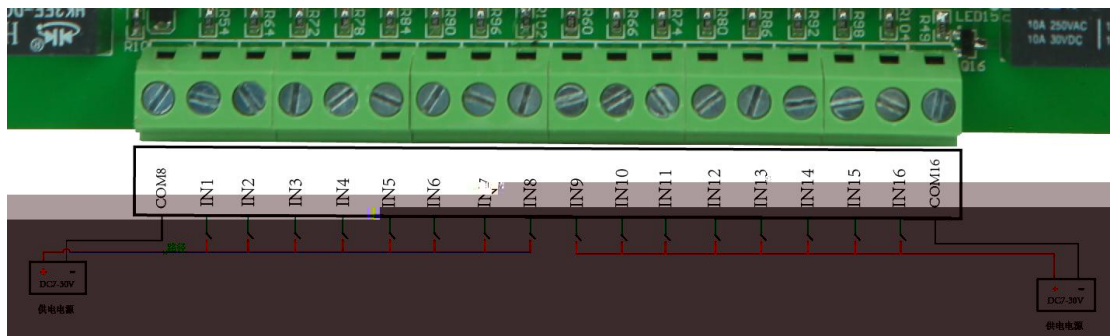

DAM

ID

ID

1

ID



2


ID

<http://www.jiyingelectronics.com/faq/faq/ID.html>

<http://www.jiyingelectronics.com/faq/dam/dam0400/串口TCP连接.rar>




USR-VCOM

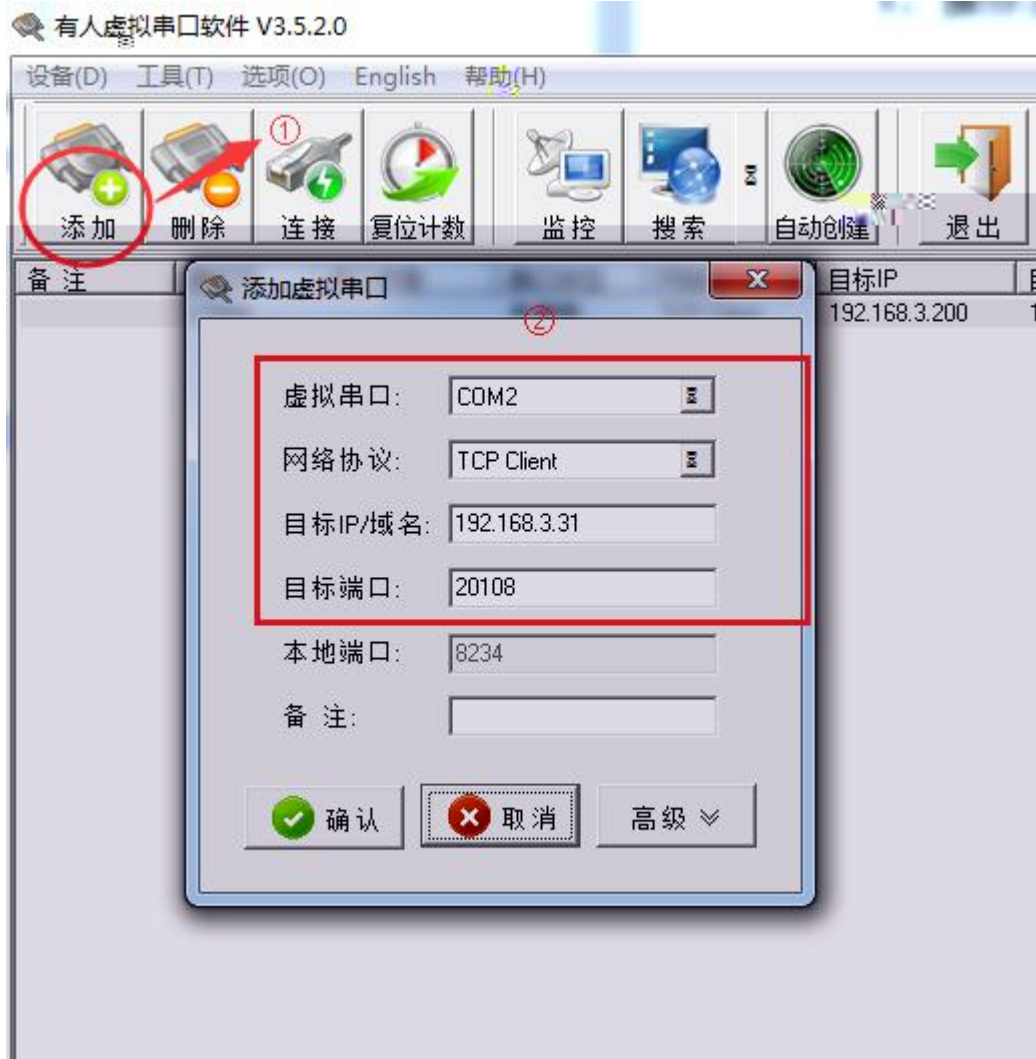

IP IP

4



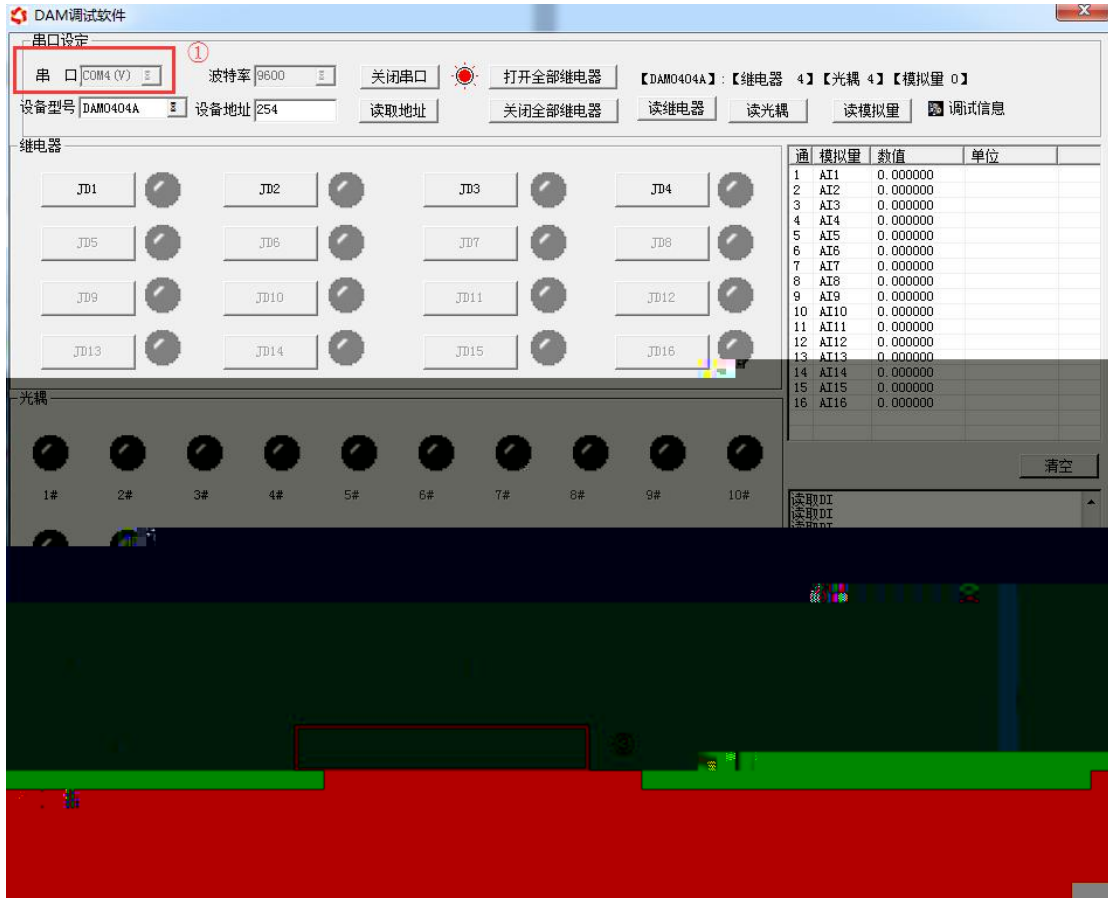

1

ID

ID

2

9600.

APP

APP

A d id IOS

DAM

GPRS

4-20 A 0-10V 0-5V

1

>

>

0.05

3	00003	
4	00004	
5	00005	
6	00006	
7	00007	
8	00008	
9	00009	
10	00010	
11	00011	
12	00012	
13	00013	
14	00014	
15	00015	
16	00016	
1	10001	
2	10002	
3	10003	
4	10004	
5	10005	
6	10006	
7	10007	
8	10008	
9	10009	
10	10010	
11	10011	
12	10012	
13	10013	
14	10014	
15	10015	
16	10016	
JD1	40001-40005	[0001]
JD2	40006-40010	[0002]
JD3	40011-40015	[0003]
JD4	40016-40020	[0004]
JD16	40076-40080	[0005]

	41001		0
		0-6	RS232 RS485
	41002		
	41003	0	
		1	
		2	
		3	
		4	
		5	
	41004		
	41005		
	30001	M db	
	30002	1-16	

30009 bi 8 00001
 30003 bi 8 bi 9 10001 10002

PLC

1

	RTU 16
	FE 01 00 00 00 10 29 C9
	FE 01 01 00 61 9C
	FE 05 00 00 FF 00 98 35
	:FE 05 00 00 FF 00 98 35
	FE 05 00 00 00 00 D9 C5
	FE 05 00 00 00 00 D9 C5
	FE 05 00 01 FF 00 C9 F5
	FE 05 00 01 00 00 88 05
	FE 05 00 02 FF 00 39 F5
	FE 05 00 02 00 00 78 05
	FE 05 00 03 FF 00 68 35
	FE 05 00 03 00 00 29 C5
	FE 05 00 04 FF 00 D9 F4
	FE 05 00 04 00 00 98 04
	FE 05 00 05 FF 00 88 34
	FE 05 00 05 00 00 C9 C4
	FE 05 00 06 FF 00 78 34
	FE 05 00 06 00 00 39 C4
	FE 05 00 07 FF 00 29 F4
	FE 05 00 07 00 00 68 04
	FE 05 00 08 FF 00 19 F7
	FE 05 00 08 00 00 58 07
	FE 05 00 09 FF 00 48 37
	FE 05 00 09 00 00 09 C7
	FE 05 00 0A FF 00 B8 37
	FE 05 00 0A 00 00 F9 C7
	FE 05 00 0B FF 00 E9 F7
	FE 05 00 0B 00 00 A8 07
	FE 05 00 0C FF 00 58 36
	FE 05 00 0C 00 00 19 C6
	FE 05 00 0D FF 00 09 F6
	FE 05 00 0D 00 00 48 06
	FE 05 00 0E FF 00 F9 F6
	FE 05 00 0E 00 00 B8 06

	FE 05 00 0F FF 00 A8 36
	FE 05 00 0F 00 00 E9 C6
16	FE 02 00 00 00 10 6D C9
	FE 02 02 00 00 AD AC

2

FE 05 00 00 FF 00 98 35

FE			
05	05		
00 00			
FF 00			
98 35	CRC16	6	CRC16

FE 05 00 00 FF 00 98 35

FE			
05	05		
00 00			
FF 00			
98 35	CRC16	6	CRC16

FE 01 00 00 00 10 29 C9

--	--

		Bi 7:	
61 9C	CRC16	6	CRC16

FE 02 00 00 00 0C 6C 00

FE			
02	02)
00 00			
00 0C			
6C 00	CRC16		

FE 02 02 00 00 AD AC

FE			
02	02		0 82
02			1+(-1)/8
00 00		Bi 0: Bi 1: Bi 7:	
AD AC	CRC16		

FE			
10	10		
00 03			
00 02			
04			1+(-1)/8
00 04/00 02			
00 0A		00 0A	
00 D8	CRC16		

FE			
10	10		0 82

00 03		
00 02		
A5 C7	CRC16	

FE 0F 00 00 00 04 01 FF 31 D2

FE 0F 00 00 00 04 01 00 71 92

FE		
0F		0 82
00 04		
01		
FF 00		FF 00
	CRC16	

FE 0F 00 00 00 04 40 07

FE		
0F		0 82
00 04		
	CRC16	

400-6688-400

